


Where are these on the camera menu?

- Shutter Speed, ISO, and Aperture are viewable on the top portion of the display screen on Canon cameras.
- For beginners, setting your camera to Aperture Priority and making minor adjustments is good way to learn how operate and take photos.

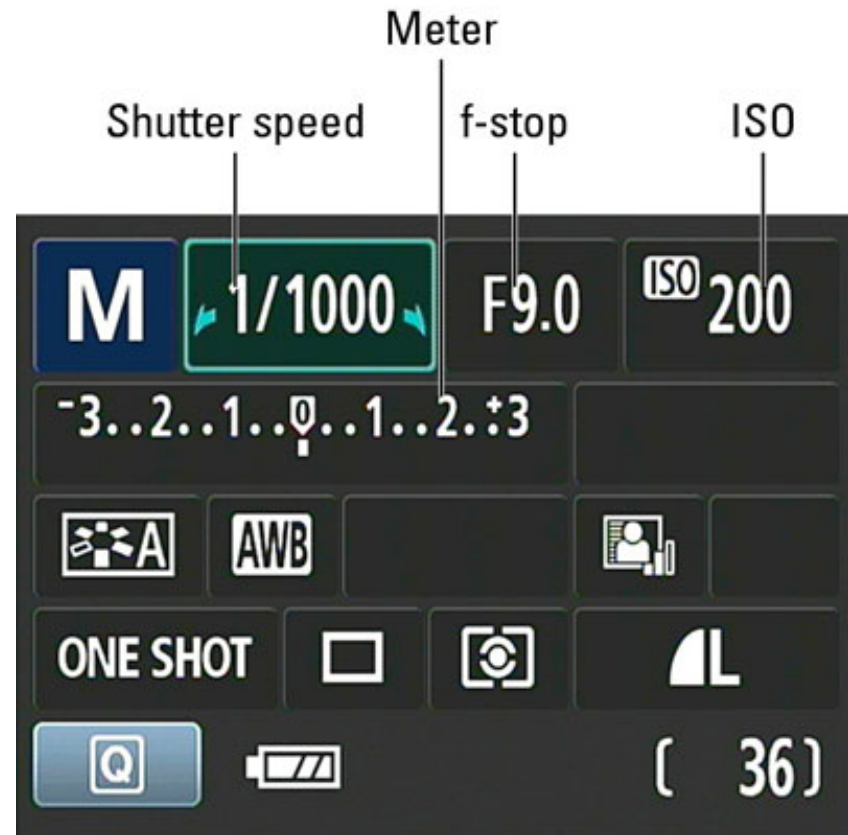

So how do we use these settings?

- Working within *The Triangle* can seem tricky at first, but if you follow a regular method, it can be straight-forward.
- Following the adjustment pattern of ISO -> Aperture -> Shutter Speed will be the most helpful.
- However, if you notice motion blur in your photos, go backwards and adjust accordingly.

